

ABSOLUTE BRAKE® – AIR BRAKE PLUNGER SECURING DEVICE LEGAL DISCLOSURE & INSTALLATION INSTRUCTIONS

**AB100
&
AB100L**



Figure # 1

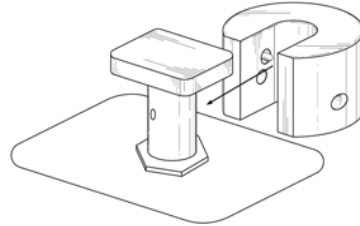


Figure # 2



Figure # 3

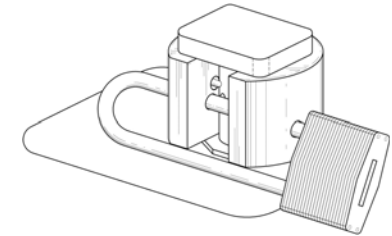


Figure # 4

**INSTALLATION
INSTRUCTIONS FOR
HALDEX-MIDLAND
CONTROLLER
VALVE**

**Midland Part#
KN20021
RKN20021**

Prior to placing the Absolute Brake® AB 100 into position, the black “Spring Plunger” should be in the upright position on the AB 100 device (see Figure # 1). Lightly swivel AB 100 back and forth in between the base of the Haldex-Midland Air Brake Controller Valve and the Plunger Knob/Button, until it locks into place (See Figure # 2). Once in position the AB 100 should be a snug fit (see Figure # 3). There is a flared entry hole on the left side of AB 100L for the Master Lock® to easily slide all the way through the device and can be locked, once completely through the holes that have been provided (see Figure # 4). We hope you enjoy the Safety, Security & Peace of Mind this product provides you!

**AB200
&
AB200L**



Figure # 1

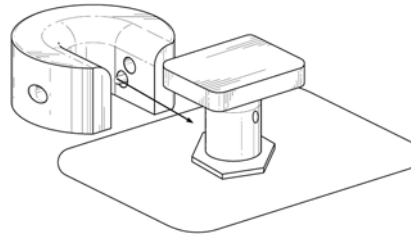


Figure # 2



Figure # 3

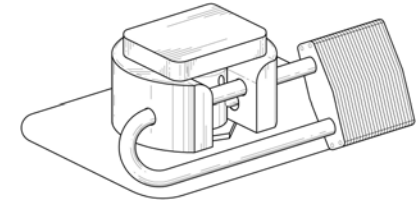


Figure # 4

**INSTALLATION
INSTRUCTIONS FOR
BENDIX PUSH/PULL
CONTROLLER VALVE**

**Bendix Part#
276567**

Prior to placing the Absolute Brake® AB 200 into position, the black “Spring Plunger” should be in the downward position with the beveled edge facing up on the AB 200 device (see Figure # 1). Lightly swivel AB 200 back and forth in between the base of the Bendix Air Brake Controller Valve and the Plunger Knob/Button, until it locks into place (See Figure # 2). Once in position the AB 200 should be a snug fit (see Figure # 3). There is a flared entry hole on the left side of AB 200L for the Master Lock® to easily slide all the way through the device, and can be locked once completely through the holes that have been provided (see Figure # 4). We hope you enjoy the Safety, Security & Peace of Mind this product provides you!